


Caberdek® and CaberfixD4®

Step by step application guide


Step 1. Adhesive I-joint application

Apply two continuous beads of CaberfixD4 adhesive to the top of the joist or I-joint. Use CaberfixD4 adhesive on joists and girders in the area that is about to be directly laid.

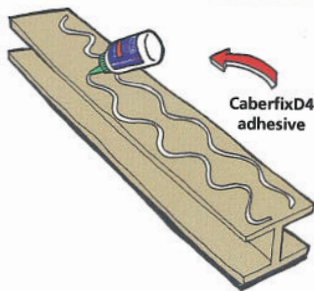


Step 2. Perimeter panel fixing

Panels should be fixed at perimeter, using annual ringshank nails or screws at 200–300mm centres. Fix flush or just below panel surface.

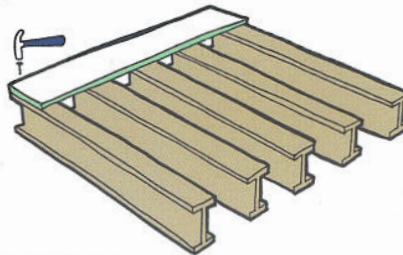


Step 3. Adhesive Tongue & Groove application

A liberal application of CaberfixD4 Adhesive should be made to both the tongue and groove of the profile joint of each panel to ensure that the entire joint is bonded. When boards are pushed together a small amount of adhesive should be squeezed out of the T&G. This seals the joint at the T&G.

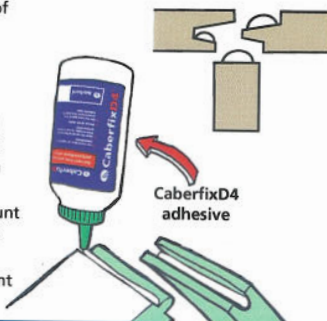


Step 4. Panel fixings

Continue laying boards in a staggered format. Panels may be secretly nailed through the tongue at T&G joints. For optimum performance we recommend a minimum of 5 mechanical fixings per 22 x 2400 x 600mm board when fitted at 600mm centres.

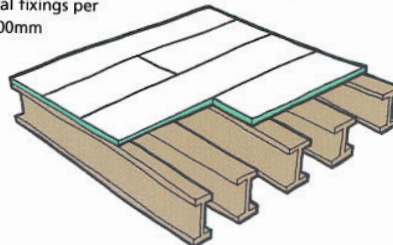

Step 5. Complete sealing

If installing Caberdek, any film that has peeled back from edges or T&G should be stuck back down using CaberfixD4 adhesive. For complete weather-tightness apply CaberfixD4 to exposed nail heads, cut edges and any exposed perimeter edges.

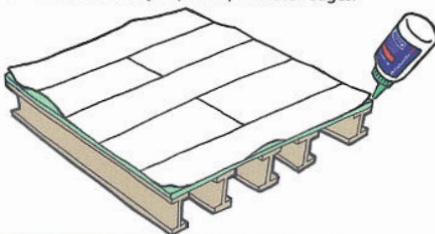

Step 6. Clean down


When all construction and decoration work is complete and the building is weather tight, the deck should be cleaned down:

Caberfloor & Cabershield:

Once dry, any excess adhesive should be removed with a scraper.

Caberdek:

Remove the peel-off film by pulling slowly but firmly from the short end.

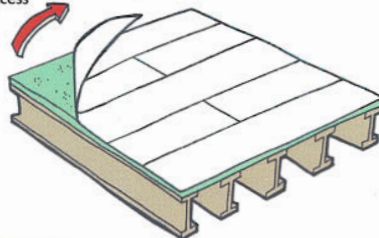

Features and benefits

- ✓ Low cost option – minimises on costs.
- ✓ One adhesive – can be used for T&G and bonding onto I-Joist.
- ✓ Easy to use – 1kg easy to hold bottle with easy flow nozzle.
- ✓ Foaming adhesive – can be seen in the joints making sure a seal is made.

Storage instructions

Protect from frost and moisture. Store in a cool (from +5°C to +25°C), dry place in original unopened packaging. Opened containers must be closed airtight and used up as soon as possible.

Recommended usage

When using CaberfixD4 adhesive to bond the board to joist, and also the T&G joint, we recommend the following:

Board size	Boards per pack	Required bottles
18mm	80	15
22mm	66	12



For the best quality floor installation, we recommend using the Caberfix Pro method (comprising of Joint&Joist and Tape).

- ✓ Produces a silent floor (no creaks and squeaks).
- ✓ Glue has shock and noise absorbing properties, will not crack under expansion or contraction.
- ✓ System is widely used by national housebuilders.